

DX8000 Portable Flex

Quick guide

START THE TERMINAL

Press the <power> button on the left side to switch on the terminal.</power>		
The payment app opens automatically via the shortcuts. If the payment app is not opened, swipe left on the screen and open the app manually.	do	
To open and pin/unpin the payment shortcuts, swipe up on the display.	$\Rightarrow \Rightarrow$	
To open the terminal menu click on the menu icon.		

SHORTCUTS

The shortcuts lead directly to the specific function and can be pinned/unpinned from the screen using the pin icon on the top right.



1

PAYMENT

1	A new transaction is started by selecting <purchase>, either from the shortcuts or in the terminal menu by selecting <transactions> and <purchase>.</purchase></transactions></purchase>	<purchase></purchase>
2	Enter amount and confirm with <ok>. The separation of the amount (e.g. euro/cents or francs/cents) is done by a decimal point. Amounts below "1" are recorded starting with "0".</ok>	<amount> OK</amount>
3	Depending on the preferred payment method the cardholder either uses the chip card/contactless/magstripe reader or QR code payment.	1 3)) 殿
4	The amount is displayed to your customer. For a card that requires a PIN, the card-holder is asked to enter the PIN code (4 to 6 digits) and confirm with <ok>. For a card without a PIN, only the amount needs to be confirmed. When making a contactless payment for a small amount, the cardholder usually does not need to do anything else. The transaction can be cancelled with the red <stop> button. Please acknowledge the message "Please return terminal" by pressing the <ok> button at the bottom right to return the terminal to its default state.</ok></stop></ok>	<pin> OK</pin>
5	Payment is processed and authorised. Chip cards: The card must remain inserted into the chip reader during the transaction until the prompt to remove the card appears.	Ţ
6	Receipt is printed. Please follow the further instructions of the terminal.	
7	The merchant receipt is printed automatically, select if a cardholder receipt is needed. Print Cardholder receipt: select <yes>. Do not print a copy of the receipt: Select <no>.</no></yes>	<yes> <no></no></yes>

REVERSAL

This function can only cancel the last transaction that has been proceeded. For payments before the last transaction, please use the function credit (see below).

Select <reversal> either from the shortcuts or in the terminal menu by selecting <transactions> and <reversal>.</reversal></transactions></reversal>	<reversal></reversal>
Enter the password of the terminal and confirm with <ok> (for the password, please see the configuration sheet).</ok>	<password> OK</password>
The amount of the last transaction is displayed and confirmed with <ok>.</ok>	ок
The reversal is processed and authorised.	\bigcirc
The receipt is printed.	
The merchant receipt is printed automatically, select if a cardholder receipt is needed. Print Cardholder receipt: Select <yes>. Do not print a copy of the receipt: Select <no>.</no></yes>	<yes> <no></no></yes>
	<transactions> and <reversal>. Enter the password of the terminal and confirm with <ok> (for the password, please see the configuration sheet). The amount of the last transaction is displayed and confirmed with <ok>. The reversal is processed and authorised. The receipt is printed. The merchant receipt is printed automatically, select if a cardholder receipt is needed. Print Cardholder receipt: Select <yes>.</yes></ok></ok></reversal></transactions>

CREDITS

If a transaction can no longer be cancelled, a credit can be made at any time.

1	Select <credit> either from the shortcuts or in the terminal menu by selecting <transactions> and <credit>.</credit></transactions></credit>	<credit></credit>
2	Enter the password of the terminal and confirm with <ok> (for the password, please see the configuration sheet).</ok>	<password> OK</password>
3	Enter the amount and confirm with <ok>. The separation of the amount (e.g. euro/cents or francs/cents) is done by a decimal point. Amounts below "1" are recorded starting with "0".</ok>	<amount> OK</amount>
4	Only when the Dynamic Currency Conversion (DCC) is activated: Enter the date of the original booking and confirm with <ok>.</ok>	<date> OK</date>
5	Depending on the preferred payment method the cardholder either uses the chip card/contactless/magstripe reader or QR code payment.	1 v)) BB
6	The merchant receipt is printed automatically. Cardholder receipt: Select <yes>.</yes>	
7	Cashier signs cardholder receipt as confirmation.	Ø
_		

END OF DAY (DAILY CLOSING)

With a daily closing, all transactions carried out are submitted and closed. Please perform the end of day regularly, ideally daily. Additionally you can also perform a shift counter. The shift counter is purely informative, and does not replace a daily closing.

Select <Daily closing> either from the shortcuts or in the terminal menu by selecting <Balances> and <Daily closing>.

<Daily closing>

IMPORTANT INFORMATION

- Software updates are performed at night, and only when the end of day is completed. Therefore, do not open a new shift in the evening after the daily closing statement.
- After "End of day", a reversal can no longer be performed.

QUERIES AND SETTINGS

Queries (Journal)

Select the <Queries> function in the terminal menu.

The following options are available:

- Shift counter (current status of the active shift)
- · Daily counter (current status since last daily closing statement)
- . Trx log info (current status of transactions after the last data transmission)
- · Print DCC rates (optional)
- · Print last trx receipt

Settings

Select the <Settings> function in the terminal menu.

The following options are available:

- · Terminal language
- Display
- Hardware Tests
- Info
- Setup Network
- Power Management Enter the password of the terminal and confirm with <OK>. (for the password, please see the configuration sheet)
- · Keyboard Tones

Function	Description	Keys
Turn on terminal	Press the <power> button on the left side to switch on the terminal.</power>	
Open main menu	Open the main menu by clicking the three horizontal lines on the top left side of the screen.	
Setup	These menu items can only be accessed with a terminal password.	<setup> <password> OK</password></setup>
Configuration	The terminal ascertains the latest configuration parameters.	<setup> <password> OK <configuration></configuration></password></setup>
Initialisation	Individual (or all) card issuers are reinitialised.	<setup> <password> OK <initialise></initialise></password></setup>
SW update	The terminal loads the latest software version. Attention! Downloading the software may take a few minutes. Do not pull the plug under any circumstances.	<setup> <password> OK <sw update=""></sw></password></setup>
Trm Reset	This function is only open to service technicians, and is protected with a special password.	<setup> <password> OK <trm reset=""></trm></password></setup>
Info	The terminal ID and the current software version are displayed.	<setup> <password> OK <info></info></password></setup>
Information Receipt	The receipt is printed with the system parameters.	<setup> <password> OK <information receipt=""></information></password></setup>

FURTHER INFORMATION

Are you looking for detailed information about your payment terminal? Product flyers can be found on our website.

worldline.com/merchant-services/terminals

Your local point of contact can be found at: worldline.com/merchant-services/contacts





















