

GIFTCARD EASY

SUPPLEMENT TO THE OPERATING MANUAL FOR YOMANI AND YOXIMO




This sheet supplements the existing terminal operating instructions. It describes the extended functions of **Giftcard Easy**. You need both the terminal password and the service password to use Giftcard Easy.

Terminal password	Used to activate the terminal.
-------------------	--------------------------------

Service password	Used to activate additional services (e.g. Giftcard Easy).
------------------	--

LOADING/RELOADING THE GIFT CARD

To complete the next step, please select the "Transactions" menu.

1	Select menu item <1>, "Transactions"	1: Transactions
2	Select menu item <0>, "Other transactions"	0: Other transactions
3	Select menu item <7>, "Giftcard/VM"	7: Giftcard/VM
4	Select menu item <7>, "Load"	7: Load
5	Enter service password and confirm with <OK>	<Service PW> OK
6	If you have activated several currencies, please select the currency and confirm with <OK>	<EUR/CHF> OK
7	Enter amount and confirm with <OK>	<EUR/CHF xxx> OK
8	Swipe the card	
9	1x <OK> Merchant receipt is printed	OK = 
10	Customer receipt is printed	



SERVICE PASSWORD

Pathway for setting up a service password (if you don't already have one)

0	Main menu	
1	Select menu item <4>, "Settings"	4: Settings
2	Select menu item <4>, "Service PW"	4: Service PW
3	Enter the terminal password and confirm with "OK"	<Terminal PW> OK
4	Enter a service password of your choice (must contain at least 4 digits) and confirm with <OK>	<Service PW> OK

REDEEM AMOUNT

To complete the next step, please select the "Transactions" menu.

1	Select menu item <1>, "Transactions"	1: Transactions
2	Select menu item <1>, "Booking"	1: Booking
3	If you have activated several currencies, please select the currency and confirm with <OK>	<EUR/CHF> OK
4	Enter amount and confirm with <OK>	<EUR/CHF xxx> OK
5	Swipe the card	
6	<1> Copy for customer receipt <0> No copy	

PERFORMING A CANCELLATION



To carry out a cancellation, please select the "Transactions" menu:

1	Select menu item <1>, "Transactions"	1: Transactions
2	Select menu item <3>, "Cancellation"	3: Cancellation
3	Enter terminal password and confirm with <OK>	<Terminal PW> OK
4	Confirm amount with <OK>	OK

A gift card payment can only be cancelled immediately after the original transaction.

BALANCE INQUIRY

To complete the next step, please select the "Transactions" menu.

1	Select menu item <1>, "Transactions"	1: Transactions
2	Select menu item <0>, "Other transactions"	0: Other transactions
3	Select menu item <7>, "Giftcard/VM"	7: Giftcard/VM
4	Select menu item <2>, "Balance inquiry"	2: Balance inquiry
5	Swipe the card	
6	Customer receipt is printed	

TRIGGER DAILY CLOSING

1	Select menu item <2>, "Closing"	2: Closing
2	Select menu item <3>, "Daily closing"	3: Daily closing

YOUR LOCAL POINT OF CONTACT CAN BE FOUND AT:

six-payment-services.com/contacts

six-payment-services.com
worldline.com